

BRK Brands, Inc., ("BRK") warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. BRK, at its sole option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty performance. BRK dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BRK or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

BRK shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. BRK is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above Warranty Period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

If you have any questions that cannot be answered by reading this manual, call Consumer Affairs at 1-800-323-9005

© 2009 BRK Brands, Inc., a Jarden Corporation company (NYSE: JAH)  
3901 Liberty Street Road, Aurora, IL 60504-8122  
All rights reserved.

[www.FirstAlert.com](http://www.FirstAlert.com)

 
## Operation & Installation Guide




# ANTI-THEFT SAFE®

Models 2060DF / 2062DF / 2064DF


- Read carefully
- Keep for reference
- Do not keep inside of safe

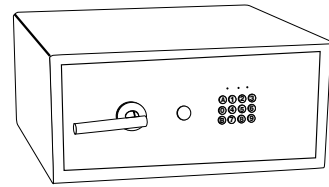





2060DF

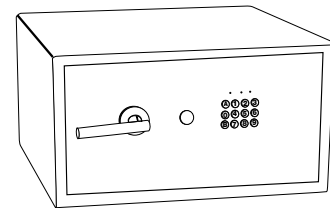 

2062DF

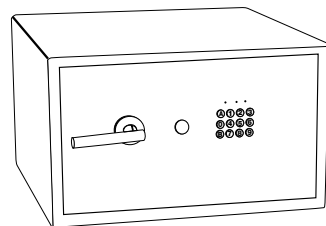 

2064DF

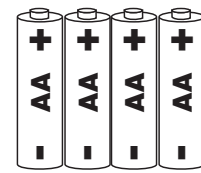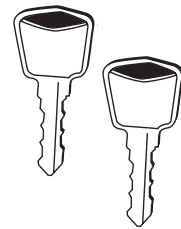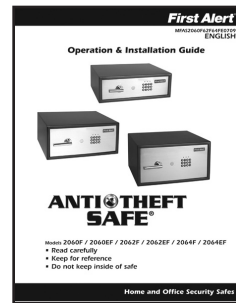    

2062DF  
2064DF


### Safe Identification Record

 Model Number \_\_\_\_\_ 1  
 Serial Number \_\_\_\_\_ 2  
 Key Number \_\_\_\_\_ 3

#### Digital Passcode Record - Model 2060DF, 2062DF, 2064DF

Your Passcode must be at least 3 digits and no more than 8 digits followed by the letter A or B.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<b>A</b>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<b>B</b>

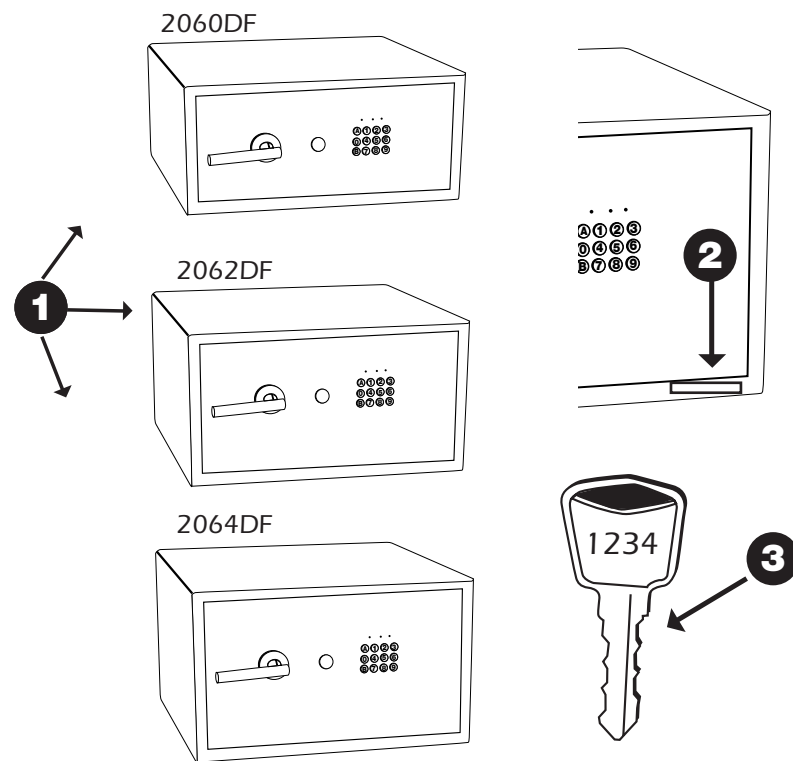

### Safe Care and Maintenance

When properly maintained, your safe will continue to operate and accurately read the authorized Passcode for many years. In order to ensure optimum performance of your safe, please follow these simple precautions:

**Replace Batteries** – For best results and performance, we recommend that the batteries be replaced at least once a year or sooner depending on amount of use.

**Clean Hands** - Never attempt to operate the digital keypad if your hands have excessive dirt, debris or liquids on them.

**Clean Safe** – To clean the surface of your safe, it is recommended that you use a mild cleaner (e.g., window cleaner) to avoid scratching or discoloring the surface. Always wipe dry and NEVER use abrasive cleansers on the safe or digital keypad.

**Moisture** – We recommend that you place delicate items such as pictures or intricate jewelry into an air-tight container before storing them in your safe. Avoid placing your safe in areas of high humidity. For optimum performance, the safe should be opened and aired out for at least 20 minutes every two weeks.

For future reference, store this Operation and Installation Guide in a secure area away from the safe. DO NOT DISCARD!

### How to Obtain Warranty Service

If service is required, do not return the product to your retailer. In order to obtain warranty service, contact the Consumer Affairs Division at 1-800-323-9005, 7:30 am – 5:00 pm Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

#### For Warranty Service return to:

BRK Brands, Inc.,  
 23610 So. Banning Blvd.  
 Carson, CA 90745

### Ordering Replacement Keys

If a key becomes misplaced or you would like additional keys, you may conveniently purchase them from our Consumer Affairs Department. You must supply the following information to assure accurate processing:

- Name / Address / Telephone
- Safe Model Number / Serial Number
- Key Number (located on the key and on the Emergency Override Key lock)
- Number of keys requested
- E-mail address if available

Checks or Money Orders are required for orders received by mail and should be made payable to First Alert. Contact our Consumer Affairs Department for costing information prior to ordering.

 
#### Mail to: First Alert

Consumer Affairs  
 3901 Liberty Street Road,  
 Aurora, IL 60504-8122

### Important: DO NOT RETURN SAFE TO STORE

If you are missing parts, have difficulty programming your safe or have any other questions pertaining to its proper use and care, DO NOT RETURN your safe to the store. Please contact Consumer Affairs at 1-800-323-9005, 7:30 am – 5:00 pm Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.


## Shelf install

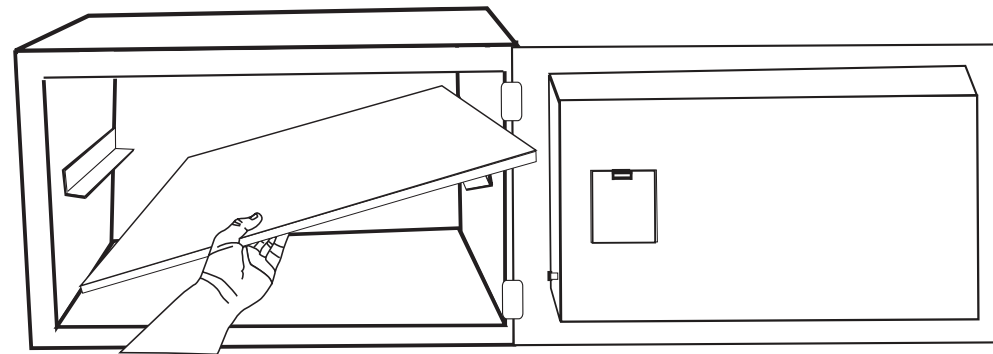

2062F, 2064F


## Shelf-top mounting

 Place safe in the desired location and use a pencil to make drill marks on the shelf

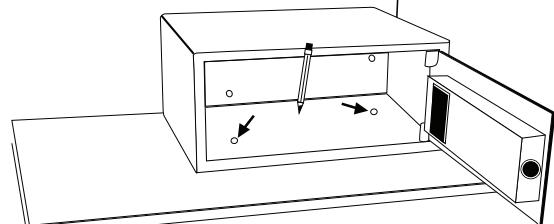


Use the safe's predrilled holes as your guide

 Locate marks and drill all the way through the shelf



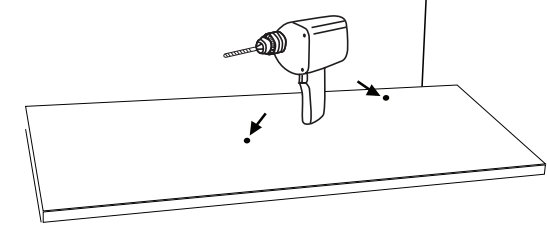


 Place safe back into position and insert the screws from the bottom. For permanent installation, tighten bolts until head breaks off

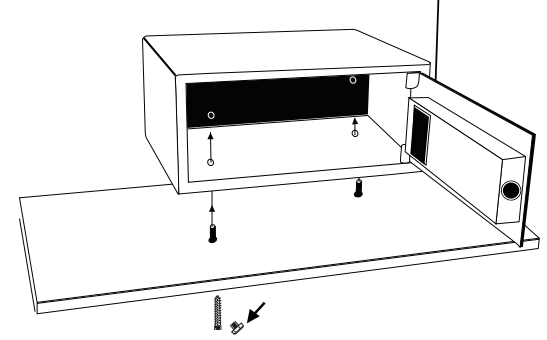


## Wall mounting

   
Wall-mount Hardware NOT included

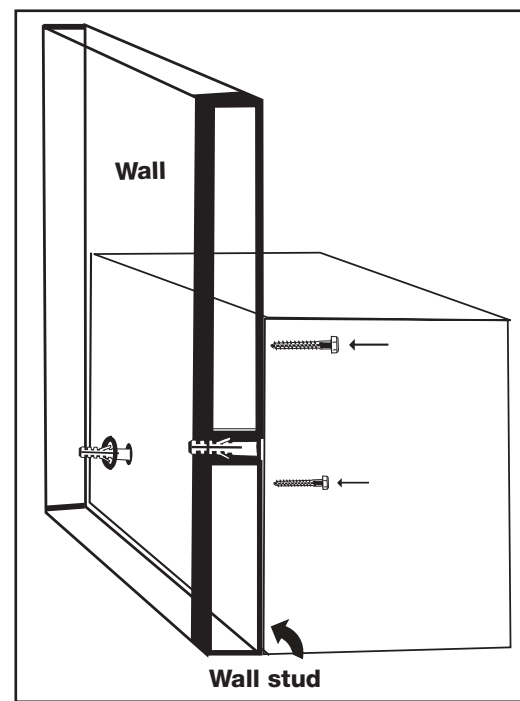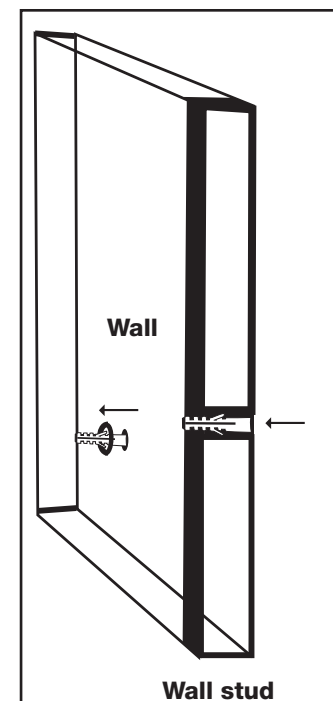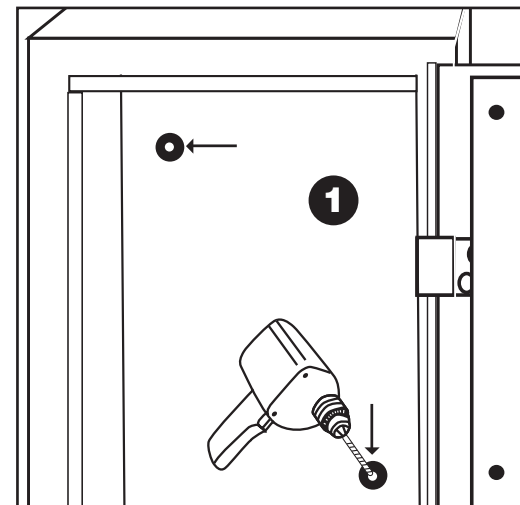



## Override key use

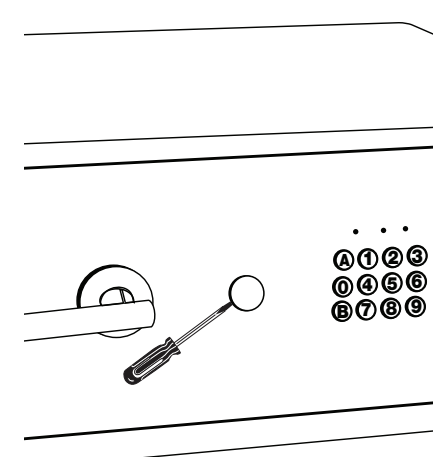 

Remove override key lock cover

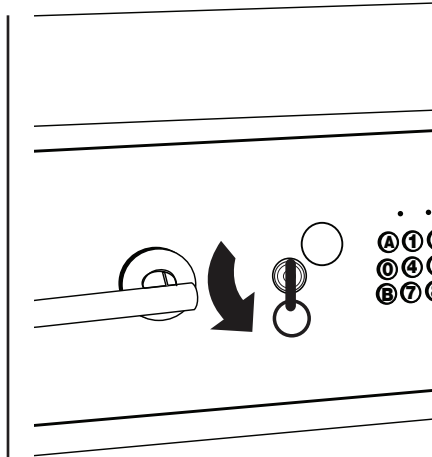 

Insert key and turn to the left

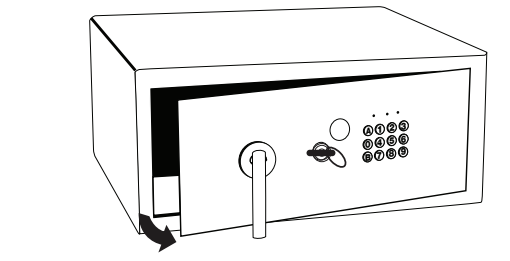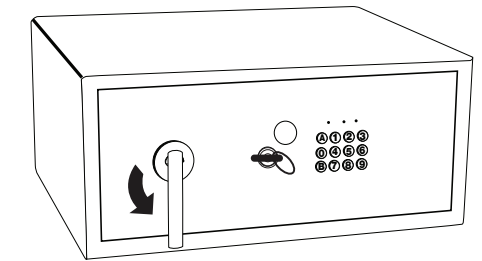  


Rotate handle counterclockwise then pull door open


### Important:

 The override key is used to gain access to the safe to change batteries or if the digital lock fails to operate. This key should be stored in a secure place away from your safe.


## Battery install

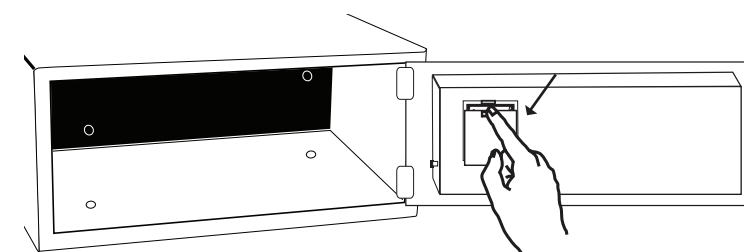

Remove battery cover

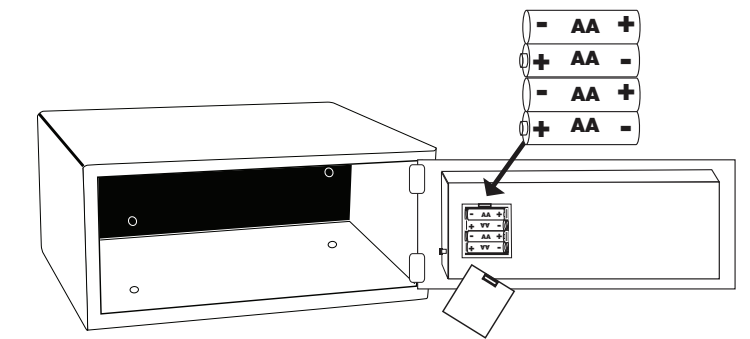 


 Install 4 "AA" batteries in the correct direction

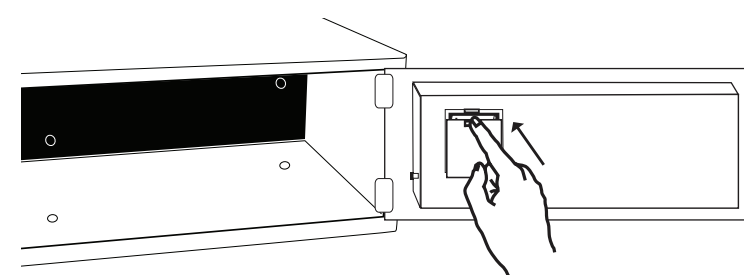

Replace battery cover.

 If installed correctly:


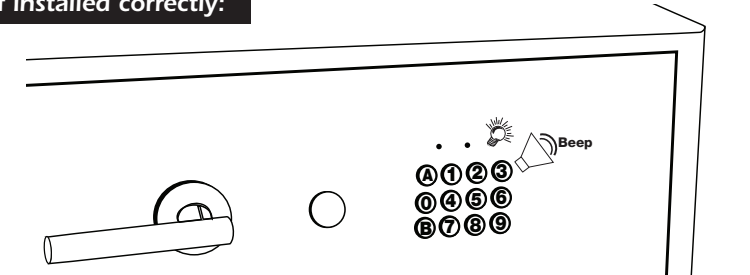


Yellow light flashes then audible beep


### Important:

  Clean the battery contacts in the battery compartment and on the batteries before installing new batteries.

# Programming your Personal Passcode

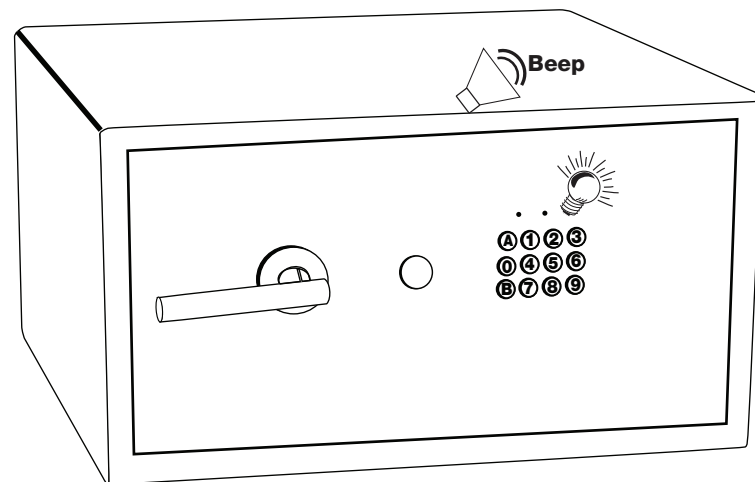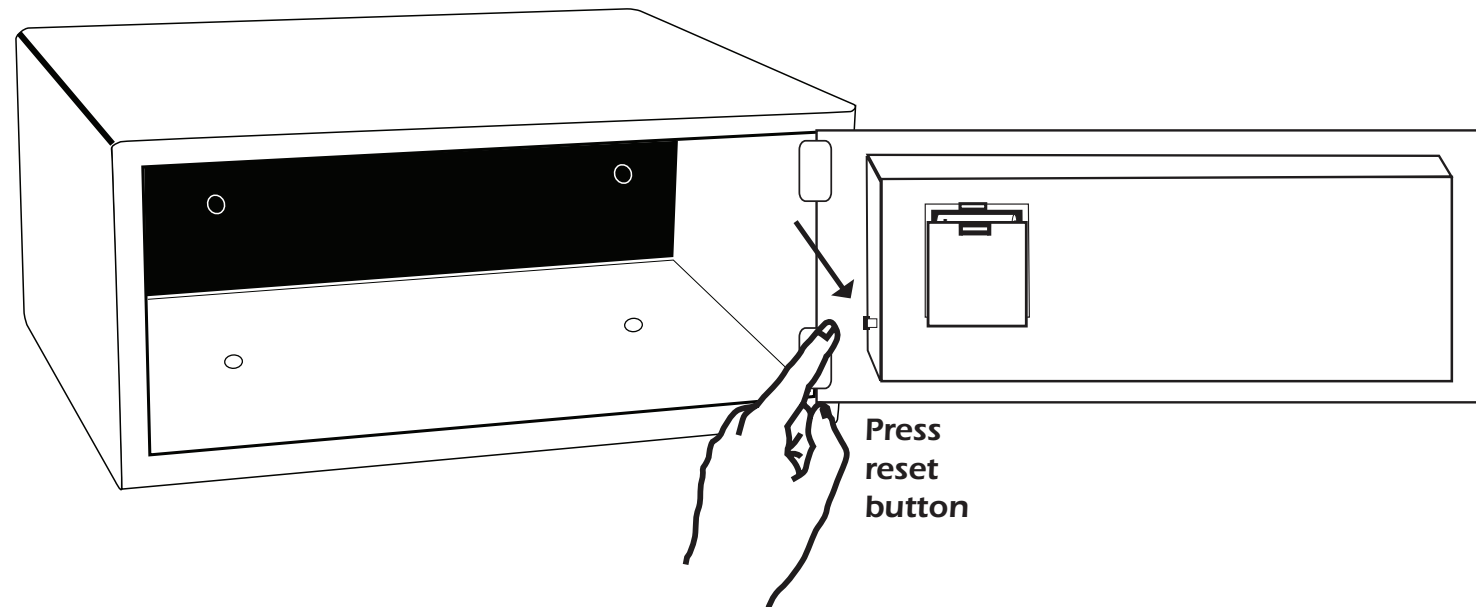


Ready light flashes along with a beep

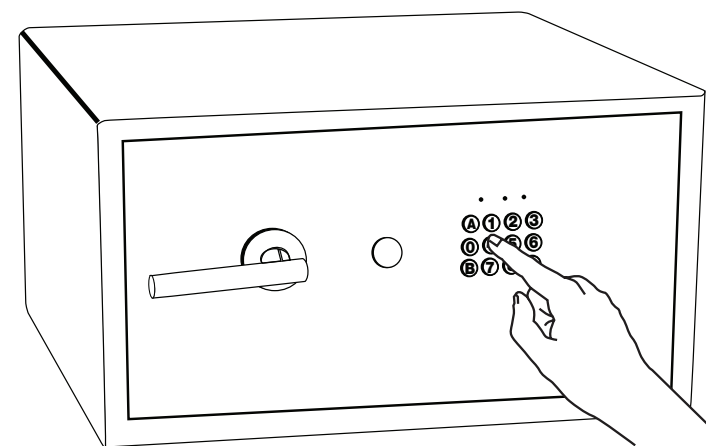 



Enter new code: 3-8 digits followed by the "A" or "B" key. Ready light flashes along with a beep

# Testing Personal Passcode
 
## Personal Passcode entry

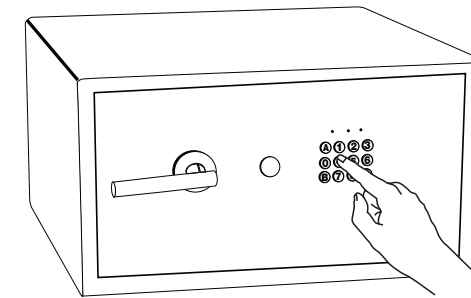


Enter new Personal Code + A or B

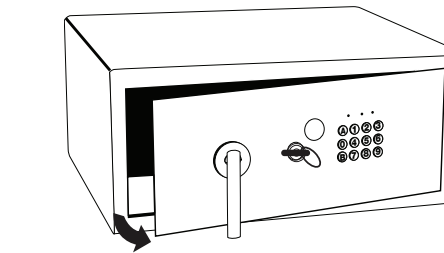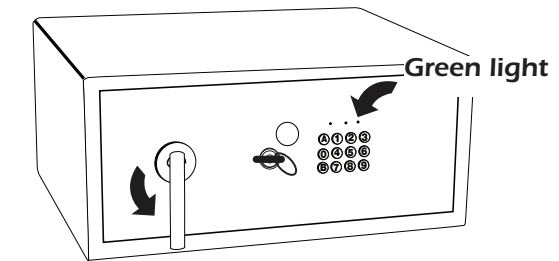  


Rotate handle counterclockwise then pull door open

## Closing safe

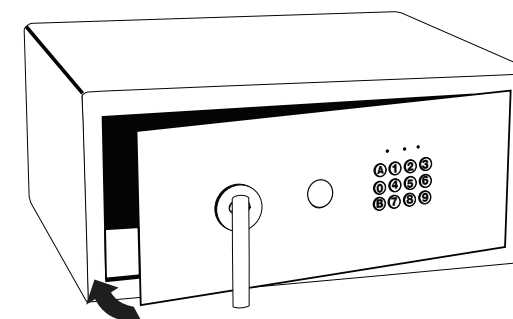 

 Push door closed then rotate handle clockwise fully into the locked position

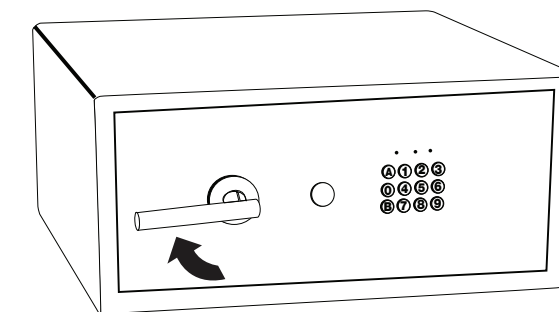

### TROUBLE SHOOTING:

If safe fails to open with your Personal Passcode, try the following:

1. Check to see if the batteries have been installed properly and replace if necessary.
2. Lock-out may have occurred. Wait 15 minutes before trying again.
3. Contact BRK Consumer Affairs Department

### SECURITY LOCK-OUT PERIODS:

For added security, the safe will automatically "Lock-out" entry for 15 minutes after three attempts to open with an invalid Passcode.